



B	Blue	Br	Brown	E	Green
G	Gray	K	Black	LB	Light Blue
LE	Light Green	O	Orange	P	Pink
R	Red	W	White	Y	Yellow

Left Handlebar Switch			Right Handlebar Switch		
Turn Signal Switch	Hi/Lo Beam Switch	Horn Switch	Cluster Illumination Switch	Start Button Switch	Ignition Switch
Left: L, W, R	High Beam: Lo, Hi, HL	Inactive: B, Ho	Off: HL, B, TL, P	Inactive: ST, B	Off: B, IG, BAT, R
Middle: O, G, LB	Regular: O, G, LB	Active: K, LE	Position: K, Br/W, Br	Active: Y/R, E	On: R, K
Right: O, G, LB	Low Beam: W, B, B/W				

Gear Position Indicator						
	B	0	1	2	3	4
N	○	○				
1		○				
2			○			
3				○		
4					○	
GD	E/R	Br/R	K/R	O/K	Y/K	

Grounding

28	Hi/Lo Beam Switch	1			
27	Turn Signal Switch	1			
26	Horn Switch	1			
25	Horn	1			
24	Starter Motor	1			
23					
22	Spark Plug (CPR6EA-9)	1			
21	Ignition Coil	1			
20	Stator	1			
19	Gear Position Indicator	1			
18	Battery	1			
17	Starting Relay	1			
16	Taillight	1			
15	Fuel Level Sensor	1			
14	Rear Brake Switch	1			
13	Turn Signal Relay	1			
12	Rectifier	1			
11	CDI	1			
10	Wire Harness	1			
9					
8	Start Button Switch	1			
7	Cluster Illumination Swi.	1			
6	Ignition Switch	1			
5	Front Brake Switch	1			
4					
3	Speedometer Assv.	1			
2	Headlight	1			
1					

#	Item #	Description	Qty	Material	Weight	Note
Razkull 125						
Razkull 125						Wire Diagram
-011000-0010						